

# SeaTrak Cheat Sheet

ICON	NAME	DESCRIPTION
	Chart Manager	Opens the Chart Manager allowing the user to browse and select charts.
	Chart Boundaries	Displays a red border around the chart area, visible on all charts.
	Corrections	Toggles Chart Corrections On/Off.
	Display Chart Notes	Displays Chart Notes, If available.
	Find Position	Centres the chart on a given Lat/Long.
	Centre on Vessel	Centres the chart on the Vessel.
	Fixed Chart	The chart will only change with user input (vessel can sail off the chart)
	Fixed Vessel	The chart will change automatically as the vessel changes position (GPS only)
	Zoom to Area	Zoom to an area on the chart by selecting with a click and drag box.
	Zoom Chart In	Increase the magnification of the chart currently displayed (can be changed to 'scale in' under program options.
	Zoom Chart 1:1	Displays the current chart at its original size.
	Zoom Chart Out	Decrease the magnification of the chart currently displayed (can be changed to 'scale Out' under program options.
	Day Palette	Displays chart at its original brightness
	Twilight Palette	Displays chart at lower brightness (adjustable in options)
	Night Palette	Displays chart at lowest brightness (adjustable in options)
	Toggle Console On/Off	Hides or Displays the console pane
	New Window	Opens an additional Chart window within SeaTrak.
	About	Displays Window with software and support information.
	Configure Serial (COM) Ports	Opens 'Set Up COM Ports' Window, allowing the correct Port settings to be selected.
	Configure Devices	Opens 'Device Settings' Window, allowing the fine tuning of GPS, AIS and Autopilot settings.
	Display Satellite Information	Opens 'Satellite Information' Window, for monitoring signal strength.

	Man Overboard	Toggles the Man overboard condition On/Off
	New Divider	Allows the user to create a new set of dividers.
	New Waypoint	Allows the user to add waypoints via the mouse.
	New Route	Allows the user to add a route via the mouse.
	New Boundary	Allows the user to add a boundary via the mouse.
	New Log Entry	Allows the User to add a new entry to the log.
	New EBL From Vessel	Allows the user to add and electronic bearing line using the vessel as the point of origin.
	New Fixed EBL	Allows the user to fix a point of origin and create an electronic bearing line from it.
	Toggle Wrecks	Hides or displays wrecks.
	Display Wreck Pane	Toggles the wreck information pane (only visible when wrecks are selected)
	Wrecks Search	Search for wrecks by name.
	Display Wrecks in Area	The user can use the radial tool to display all wrecks in an area.
	Display Wrecks list	Displays a list of all the selected wrecks.
	Wreck Legend Dialog	Opens the wreck legend dialog, allowing the user to change the way wreck information is displayed on the chart.
	Wreck Report	Opens the wreck examination report for local editing and printing.
	Toggle Tide Port Symbols On/Off	Displays an icon at each tide port allowing the user to access tide port information.
	Set Clearance	Set the vessel clearance (for use with sounder)
	Toggle Tide Diamonds On/Off	Overlays a tidal diamond on the chart.
	Active Tidal Diamond	Overlays an active tidal diamond on the chart.
	Toggle Display of Real-time Tidal Streams On/Off	Overlays arrows on the chart showing the calculated direction on the tidal stream.
	Toggle Set Drift Information On/Off	Displays tidal strength and direction information on the screen.